IMPORTANT INSTRUCTIONS – OPERATING MANUAL

OSCILLATING TOWER CERAMIC HEATER

MODEL: R-8058

READ AND SAVE THESE INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED.
PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION.
FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

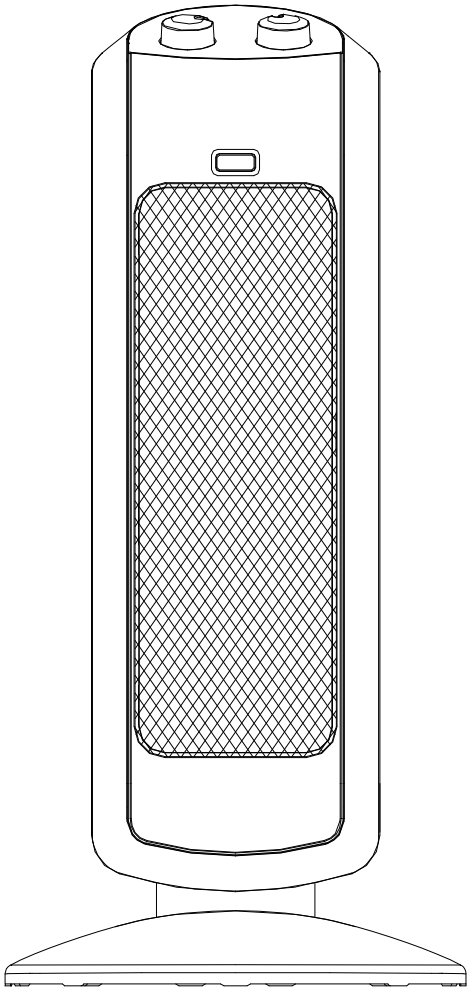

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following:

1. **Read all instructions before using heater.**
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 0.9 m from the front of the heater and keep them away from the side and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damage cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. No not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn off the **ROTARY POWER SWITCH** on the top of unit to "**O**" position, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
14. Make certain that the power source conforms to the electrical requirements of the heater.
15. If the plug of heater does not fit fully in the outlet, contact a qualified electrician. Do not attempt to defeat this safety feature.
16. Avoid the use of extension cords because the extension cord may overheat and cause a risk of fire.
17. Heater is not located below a socket-outlet.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. **SAVE THESE INSTRUCTIONS.**

WARNING: DO NOT DEPEND ON THE ON/OFF SWITCH THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OR MOVING THE HEATER. ALWAYS UNPLUG THE POWER CORD.

FIX BASE

1. Guide the power cord through the center of the front base and connect the front base to the main unit.
2. Fit the rear base onto the front base and the main unit.
3. Screw the four screws through base parts and into the main unit.
4. Attach the power cord guard over the power cord and to the rear base.

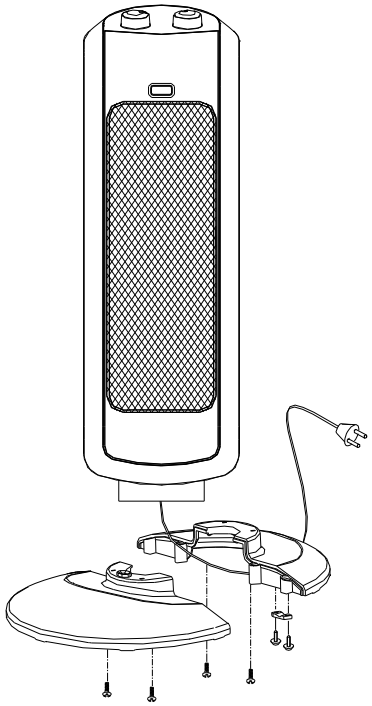

INFORMATION

Do not use your heater if it has not been fully assembled make sure that the screws that hold the base pars and the main unit together are tightened securely.

TECHNICAL SPECIFICATIONS

- Working voltage: 220-240V/50Hz
- Wattage: 1900W (+5%, -10%)
-

OPERATION INSTRUCTIONS

1. Carefully unpack your heater from box, please save the carton for off-season storage.
2. The heater must be placed on a firm, level surface.
3. Plug the cord set into a electrical outlet. Be sure plug fits tightly in outlet. A loose fit will cause overheating and damage the plug. Plug and cord set may feel warm during normal usage. Once plugged in, the Power Light will illuminate.
   NOTE: Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 watts, this unit draws 12.5 Amps.
4. When turn on the **Rotary power switch**, the red light will come on indicating that there is power to the unit. The red light will remain lit until the **Rotary power switch** is turned off and the heater is unplugged from the electrical outlet.
5. Rotate the **Rotary power switch** to set the function,

0	✽		
Off	Fan	Low heat mode	High heat mode

6. Turn on the **Oscillating switch** will allow the heater to oscillate left and right. To stop the oscillation, turn off the oscillating button.
7. To turn the heater off, rotate the **Rotary power switch** to "**O**" position, then remove plug from power outlet.

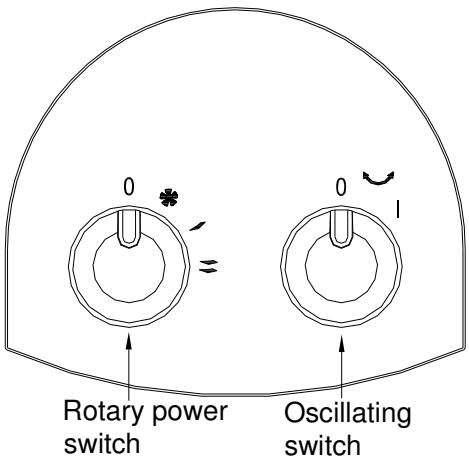

SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the

heater will be automatically shut off. It can only resume operation when the unit to cool down.

TROUBLE SHOOTING TIPS

If your heater shuts off unexpectedly or fails to operate, one of the above-mentioned safety features may have activated to prevent overheating.

1. Be sure the power cord is plugged into a working electrical outlet.
2. Check your thermostat setting. The heater may be off because it has reached the desired temperature setting.

MAINTENANCE

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.
DO NOT IMMERSE HEATER IN WATER!

CLEANING: IMPORTANT! DO NOT IMMERSE HEATER IN WATER! Clean the heater grills with the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater. DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth.

CAUTION: Do not use gasoline, benzine, thinner, harsh cleaners, etc. as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS.

STORAGE: Store the heater with these instructions in the original carton in a cool, dry place.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.